


Ultra Seam - Perma Welding

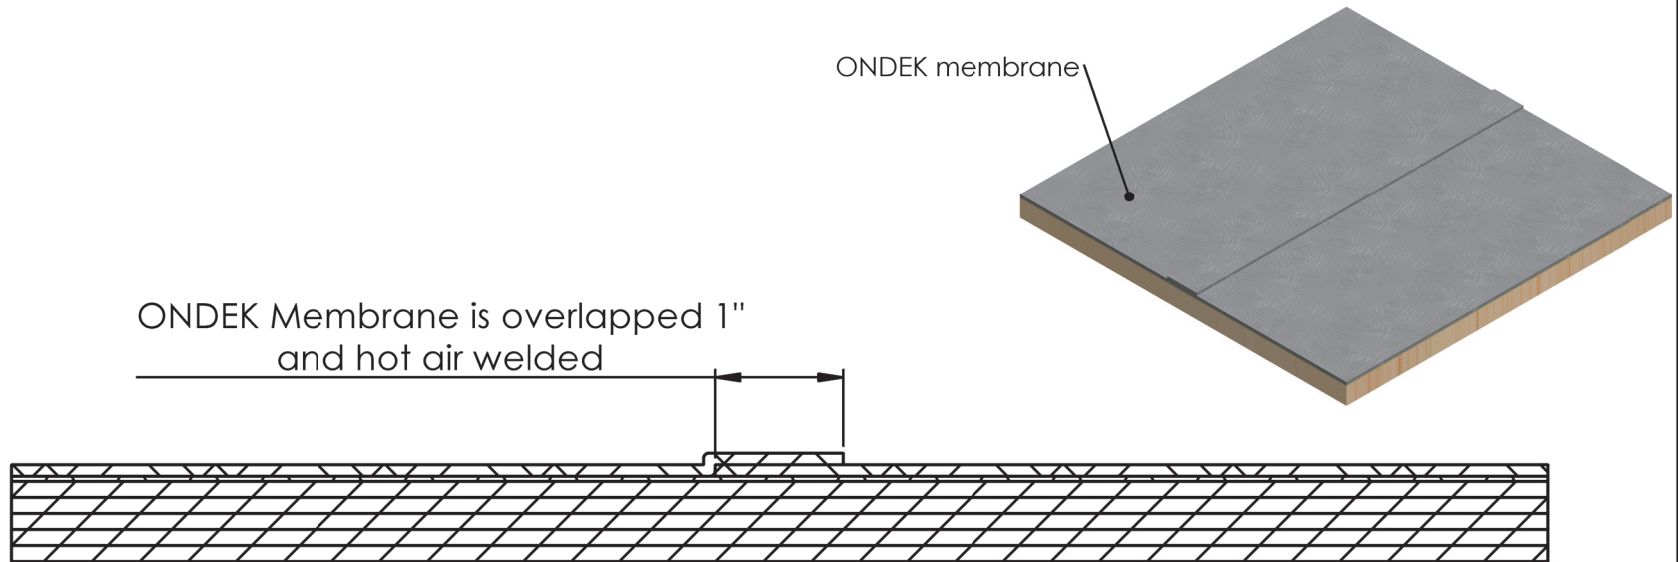

Ultra-seam - Weld PVC to PVC ensuring true waterproof of all seams.

Note: Ultra-seams contain no fleece on back of the membranes. No more contaminated seams.

Ultra Seam - Perma Welding

Notes:

- Installation to be completed in accordance with ONDEK's specifications.
- Minimum sloped 3/16":12" away from structure
- Plywood substrates to be a minimum of 5/8" T&G. Plywood joints to be blocked from below.
- Any dimensions shown are approximate. Do not scale drawings.

ONDEK
VINYL WORX

info@ondekvinyllworx.com
604-625-1159 Phone
604-625-1194 Fax
1-866-96ONDEK(966-6335) Toll Free
ondekvinyllworx.com
Unit 101 - 26730 - 56th Ave
Aldergrove, BC V4W 3X5 Canada

Date: Mar 15, 2020
System: Fully adhered
Project: Training
Drawing #: OD - 123

Note: As a supplier of finished product only, ONDEK Vinyl Worx Inc. does not assume responsibility for errors in design, engineering, or dimension. The architect, engineer, specifier, contractor, or representative must verify all dimensions, sizes & suitability of details.