


Rectangular Post with Membrane Flashing

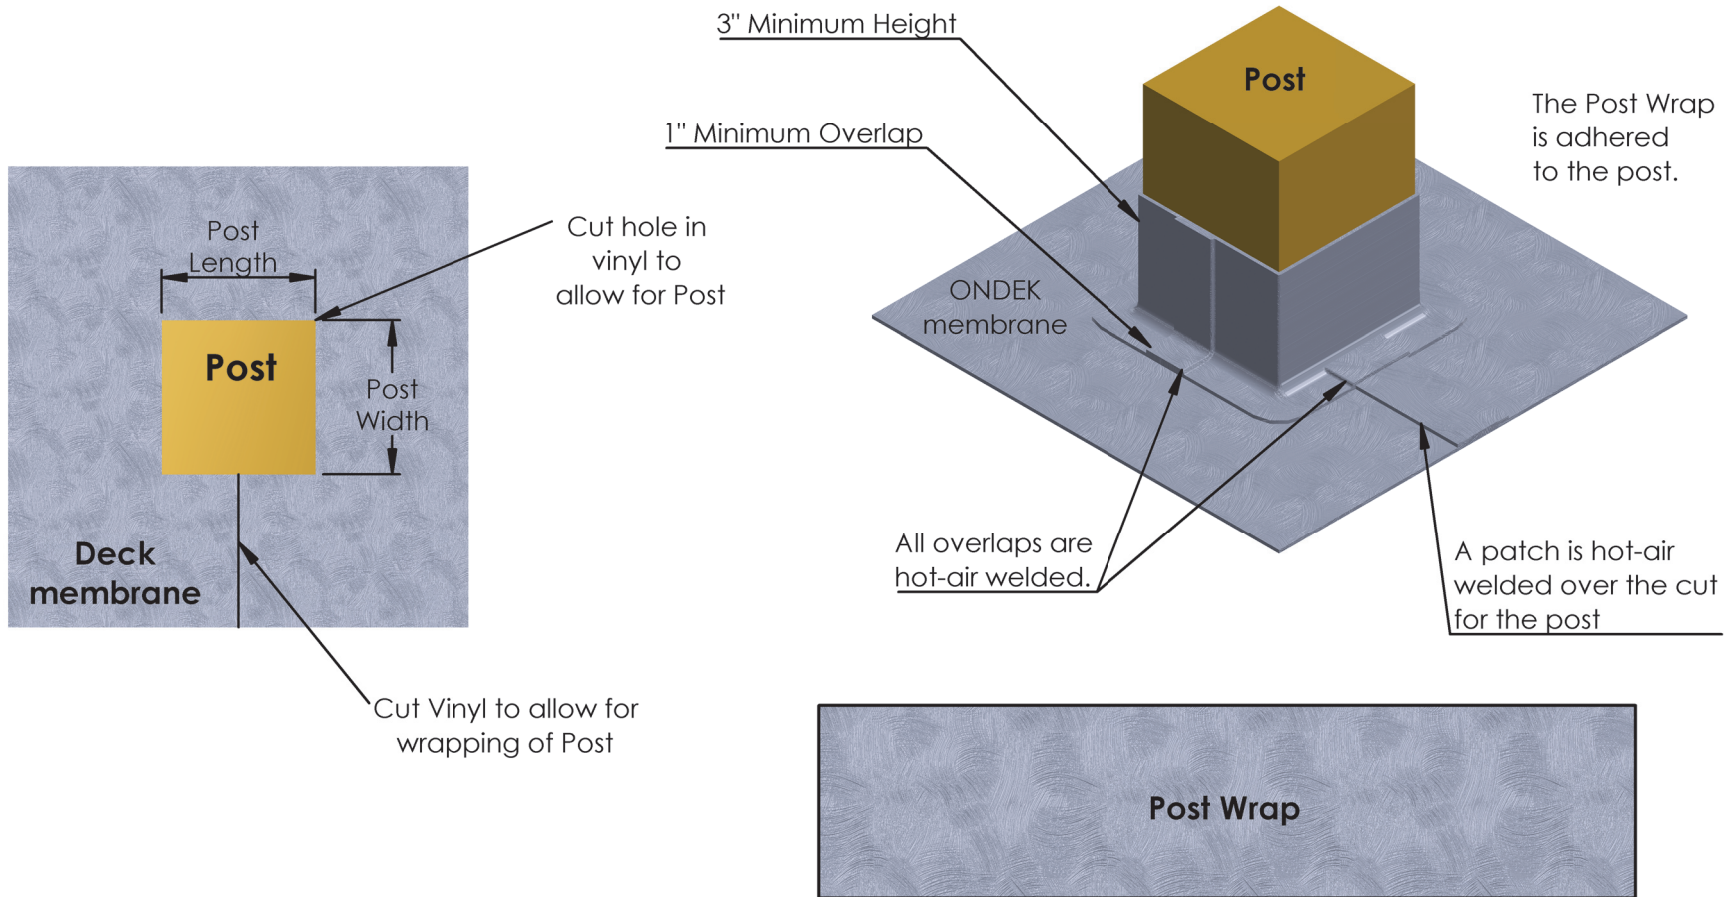

Width = Sum of post sides + overlap (Min. 1")
 Height = Required height (Min. 3" + overlap at base (Min. 1"))

ONDEK
VINYL WORX

info@ondekvinylworx.com
 604-625-1159 Phone
 604-625-1194 Fax
 1-866-96ONDEK(966-6335) Toll Free
 ondekvinylworx.com
 Unit 101 - 26730 - 56th Ave
 Aldergrove, BC V4W 3X5 Canada

Date: Mar 15, 2020
 System: Fully adhered
 Project: Training
 Drawing #: OD-102

Note: As a supplier of finished product only, ONDEK Vinyl Worx Inc. does not assume responsibility for errors in design, engineering, or dimension. The architect, engineer, specifier, contractor, or representative must verify all dimensions, sizes & suitability of details.