


Deck Edge Before Siding

For New Construction, the vinyl membrane is adhered to the wall prior to the siding being installed

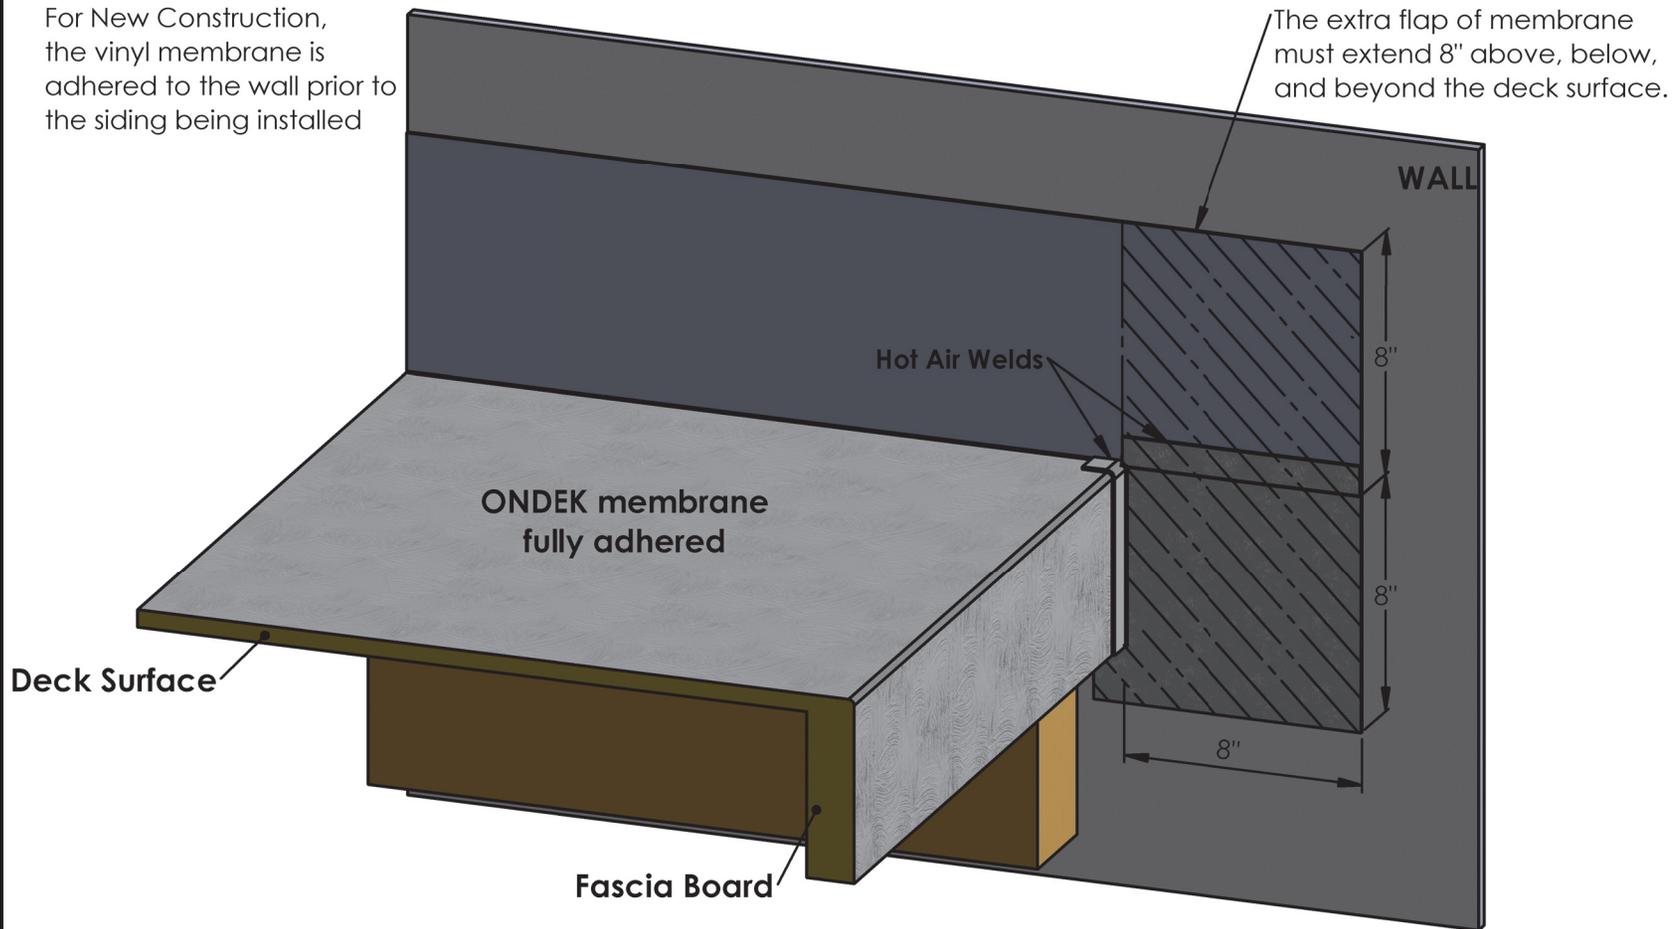

The flap is left loose so that the Sider can tuck it under the wall paper when it is applied.

ONDEK
VINYL WORX

info@ondekvinylworx.com
604-625-1159 Phone
604-625-1194 Fax
1-866-96ONDEK(966-6335) Toll Free
ondekvinylworx.com
Unit 101 - 26730 - 56th Ave
Aldergrove, BC V4W 3X5 Canada

Date: Mar 15, 2020

System: Fully adhered

Project: Training

Drawing #: OD - 104

Note: As a supplier of finished product only, ONDEK Vinyl Worx Inc. does not assume responsibility for errors in design, engineering, or dimension. The architect, engineer, specifier, contractor, or representative must verify all dimensions, sizes & suitability of details.